

FDOT Automated Quantities - Chapter 4 Calculating Quantities




***Denise J Broom
FDOT
Production Support Office - CADD***

Objectives

- *Create Shapes*
- *Introduce the D&C Manager Compute Mode*
- *Review Design & Computation Settings*
- *Calculate Linear and Area quantities*
- *Learn How to Modify or Add Items to the Database*
- *Label Area Shapes with Area ID*


Creating Shapes

- *Shapes are created to calculate area quantities.*
- *Open the D&C Manager, select the appropriate item and turn ON Place Influence and Adhoc Attributes BEFORE creating shapes.*
- *Shapes should be Simple, not Complex.*
 - *Use the option to Simplify Geometry when available.*
- *With Civil Elements, it is recommended to use the Create Region tool.*
 - *Do NOT toggle on Associative Boundary. D&C will NOT recognize the shape to quantify.*

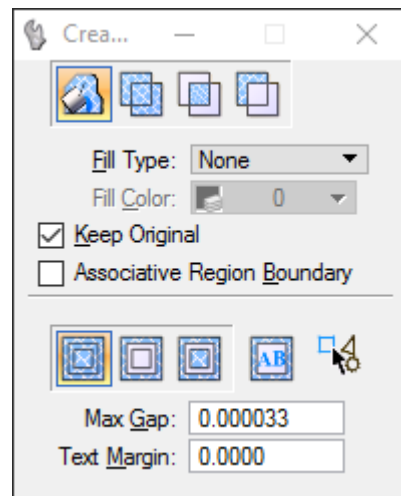

Calculating Quantities

- *D&C Manager Automates Quantity Calculations*
- *Settings to Consider*
 - *Design Settings*
 - *Compute Settings*

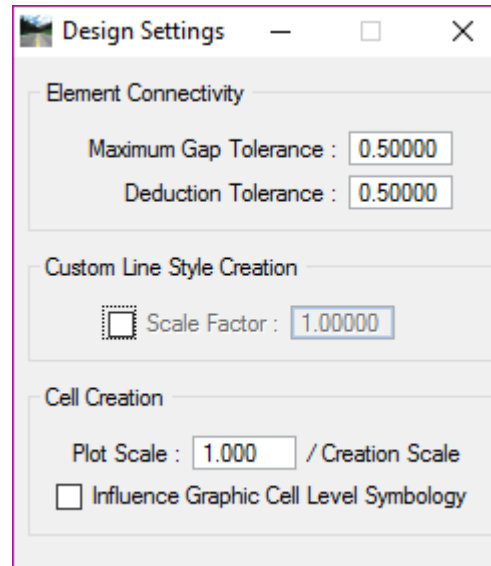

Design Settings

Element Connectivity

Maximum Gap Tolerance : 0.50000

Deduction Tolerance : 0.50000


Custom Line Style Creation

☐ Scale Factor : 1.00000

Cell Creation

Plot Scale : 1.000 / Creation Scale

☐ Influence Graphic Cell Level Symbology

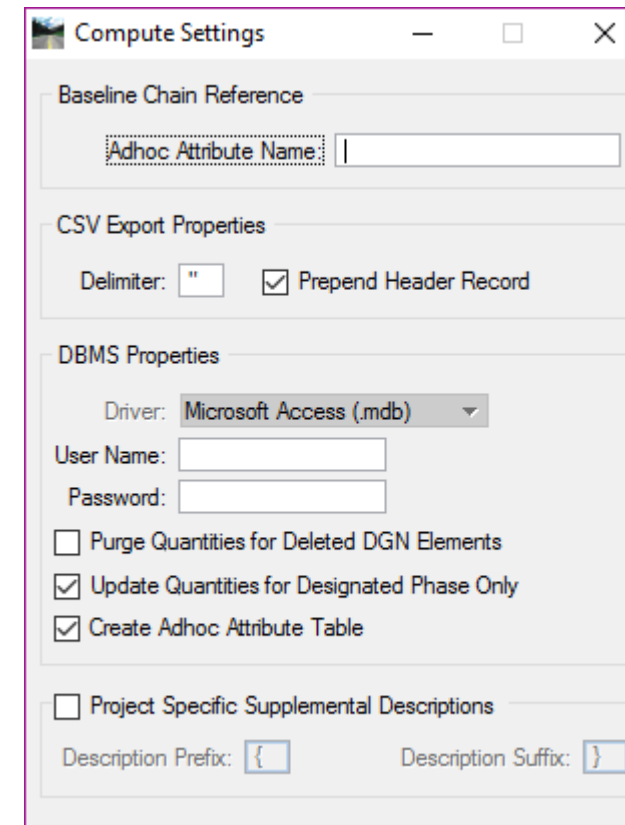

Compute Settings

Baseline Chain Reference

Adhoc Attribute Name: |

CSV Export Properties

Delimiter: " ☐ Prepend Header Record

DBMS Properties

Driver: Microsoft Access (.mdb)

User Name:

Password:

☐ Purge Quantities for Deleted DGN Elements



☒ Update Quantities for Designated Phase Only

☒ Create Adhoc Attribute Table

☐ Project Specific Supplemental Descriptions


Description Prefix: { Description Suffix: }

D&C Manager Compute Mode

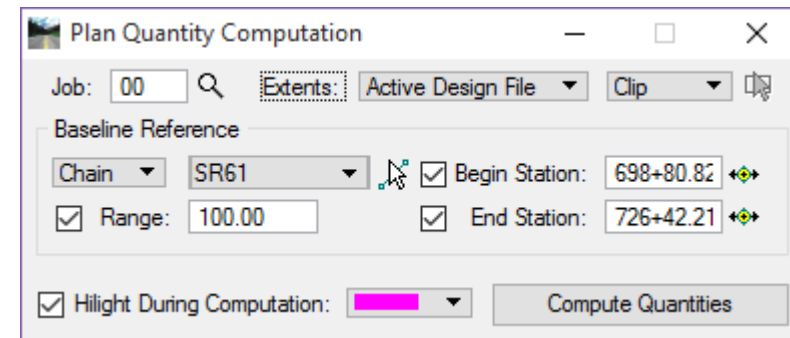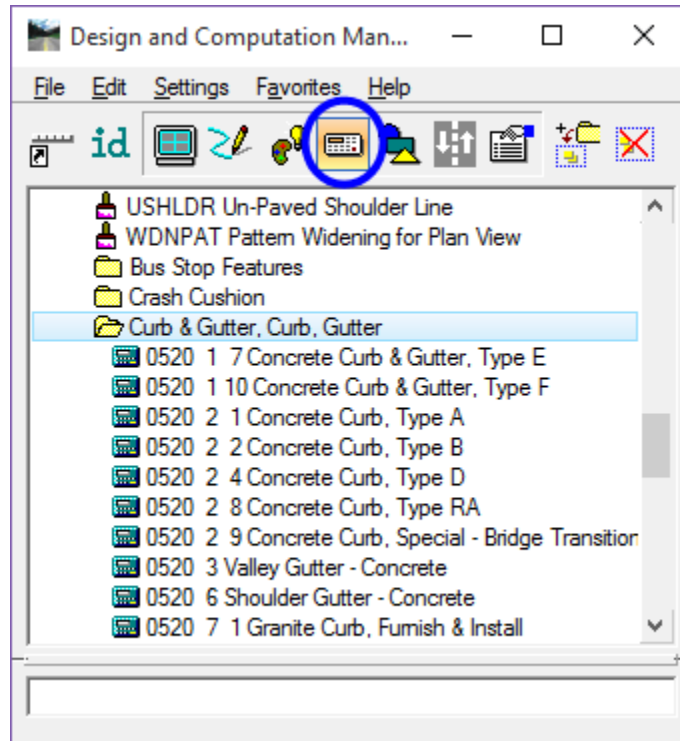

D&C Manager Compute Mode

- *Selecting Items to Compute*
 - *Single Categories*
 - *Single Items*
 - *Collection Sets*

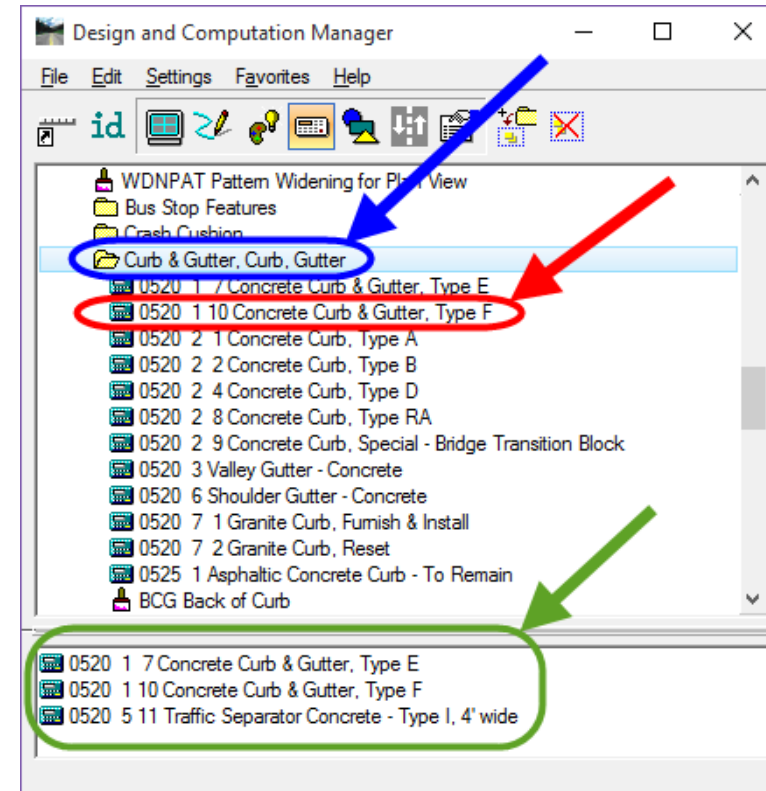


- *Myth...* Items must be in a collection set in order to be calculated.



D&C Manager Compute Mode

- *Computation Results*

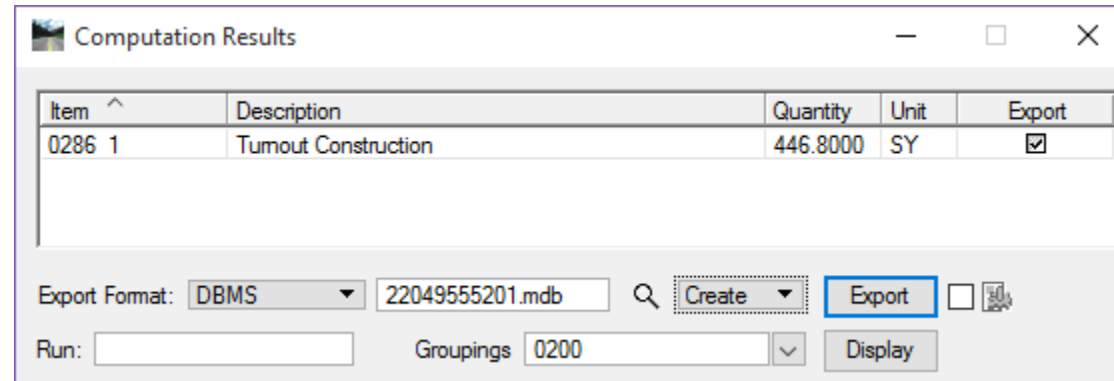

The screenshot shows a window titled "Computation Results" with a table and control buttons. The table has five columns: Item, Description, Quantity, Unit, and Export. It contains one row of data. Below the table are controls for exporting the data, including a dropdown for "Export Format" set to "DBMS", a text box for the file name "22049555201.mdb", a "Create" button, an "Export" button, a "Run" text box, a "Groupings" dropdown set to "0200", and a "Display" button.


Item ^	Description	Quantity	Unit	Export
0286 1	Turnout Construction	446.8000	SY	<input checked="" type="checkbox"/>

Export Format: DBMS 22049555201.mdb Create Export Run: Groupings 0200 Display

- *Export Format: DBMS to use Quantity Manager*
- *Groupings: Make sure to set to correct PrP grouping to import into Designer Interface (DI).*
 - *NOTE: DesignEstimate (default) causes ERROR on import to DI.*

Label Shapes with ID

- *VBA located on the FDOT Actions Menu and Quantities Task Menu*

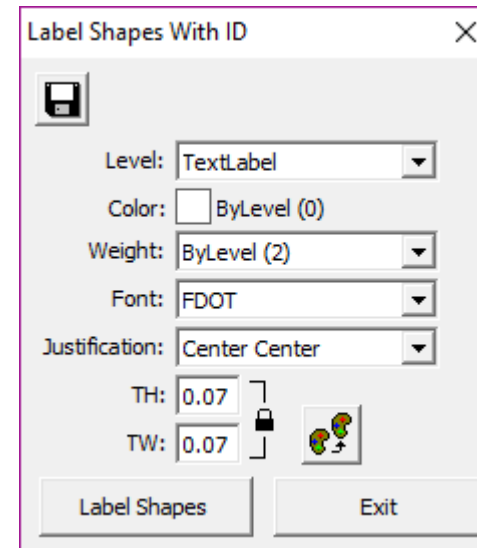

Questions???

Thank-you for joining today's session.

Need some HELP? Contact me...

(850) 414-4751

E-mail: Denise.Broom@dot.state.fl.us

OR: ecso.support@dot.state.fl.us

<http://www.dot.state.fl.us/ecso>

FDOT CADD Support Forum On-line

http://communities.bentley.com/communities/user_communities/fdot_cadd_support/default.aspx

